

INSTRUCTIONS FOR #6485 ROLLER CONTACT

The 6485 is designed for use with a Dial Indicator indicating a moving surface.

If the roller does not rotate freely, it may have become jammed by a dirt particle. Clean with an air gun. Lubricate with light machine oil.

1" plunger extender is used only in conjunction with #6487, 6488, 6489, and 6490 timing gages.

IMPORTANT

READ BEFORE USING WITH #6487 TIMING GAGE:

1. Be certain that there is sufficient clearance at top of piston when piston comes to T.D.C. Insufficient clearance will cause roller contact to bottom against adaptor causing possible damage to engine and indicator.
2. In positioning indicator, be certain that roller is up and down with piston to prevent binding. Roller should be locked in position by using knurled nut, finger tight only.

 **Central Tools, Inc.**
456 Wellington Avenue
Cranston, Rhode Island 02910

11/99
6485

Copyright Central Tools Inc.

Printed in U.S.A.